


TO INSTALL LOCKOUT DEVICE, PLACE AROUND CORDSET END AND CLOSE UNTIL CONNECTOR SNAPS CLOSED. REFERENCE DIAGRAM OF CONNECTOR.

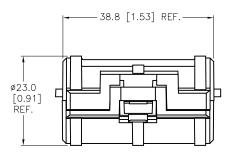

LOCKOUT DEVICE FITS ALL STRAIGHT TURCK EUROFAST CONNECTORS. (RKC, RSC, RKS, RSS, RKSW, RSSW)

TO REMOVE LOCKOUT DEVICE, INSERT SMALL SCREWDRIVER INTO LOCKING GROOVE AS SHOWN IN PICTURE. ROTATE SCREWDRIVER IN DIRECTION SHOWN UNTIL LOCKING DEVICE RELEASES.

## SOURCE DRAWING - FOR REFERENCE ONLY

				RELATED DOCUMENTS 1. 9-RDV-166 2. 3. 4.	3RD ANGLE PROJECTION	THIS DRAWING IS CONFIDENTIAL AND THE PROPERTY OF TURCK INC. USE OF THIS DOCUMENT WITHOUT WRITTEN PERMISSION IS PROHIBITED.		JRCK "	000 CAMPUS NEAPOLIS, MN 1-800-544-7 (763) 553-7 (763) 553-0 www.turck.u	55441 7769 300 708 fax
				MATERIAL		APVD	DATE 12/29/04 SCALE 1=1.0		CK-EURO-C (10/BAG)	
			FINISH			IDENTIFICATION NO.		REV		
				CONTACT TURCK FOR MORE	MILLIMETERS		A0886		В	
B UPDATE TO NEW EURO-LOCK PARTS	RDS	05/04/16	54524		INFORMATION					
REV DESCRIPTION	BY	DATE	ECO NO.			DO NOT SCALE THIS DRAWING		FILE: A0886	SHEET	1 OF 1